

Lms24PD-05-R-PA and Lms24PD-05-RW-PA

| Device parameters | Symbol | Value | Units |
|-------------------------|-------------------|-----------|--------------------|
| Sensitive area diameter | d | 0.5 | mm |
| Storage temperature | T_{stg} | -50..+60* | $^{\circ}\text{C}$ |
| Operating temperature | T_{opr} | 0..+50* | $^{\circ}\text{C}$ |
| Reverse voltage | operates unbiased | | |




*PD design for higher storage/operating temperature is available under request

| Photodiode parameters | Conditions | Symbol | Value | Units |
|-------------------------------|---|------------------------|----------------------------|---|
| Cut-off wavelength | $T = 25\text{ }^{\circ}\text{C}$ | λ_{cut} | 2.40 - 2.46 | μm |
| Max. sensitivity range (>80%) | $T = 25\text{ }^{\circ}\text{C}$ | λ_p | 1.1 - 2.3 | μm |
| Dark current | $T = 25\text{ }^{\circ}\text{C}; V_r = 1\text{ V}$ | I_d | 10 - 100 | μA |
| Shunt resistance | $T = 25\text{ }^{\circ}\text{C}; V_r = 10\text{ mV}$ | R_{sh} | 4 - 18 | $\text{k}\Omega$ |
| Capacitance | $T = 25\text{ }^{\circ}\text{C}; \lambda = \lambda_p$ | C | 200 - 600 | pF |
| Sensitivity | $T = 25\text{ }^{\circ}\text{C}; \lambda = \lambda_p$ | S | 0.9 - 1.1 | A/W |
| Noise equivalent power | $T = 25\text{ }^{\circ}\text{C}; \lambda = \lambda_p$ | NEP | $(0.9-2.0) \cdot 10^{-12}$ | $\text{W/Hz}^{1/2}$ |
| Detectivity | $T = 25\text{ }^{\circ}\text{C}; \lambda = \lambda_p$ | D^* | $(2-5) \cdot 10^{10}$ | $\text{cm}^2 \cdot \text{Hz}^{1/2} \cdot \text{W}^{-1}$ |


Photodiodes Lms24PD-05 series are fabricated from narrow band-gap GaInAsSb/AlGaAsSb-based heterostructures lattice matched to GaSb substrate.

All specifications are for photodiode operation at 25 $^{\circ}\text{C}$ unless otherwise stated


Typical spectral response

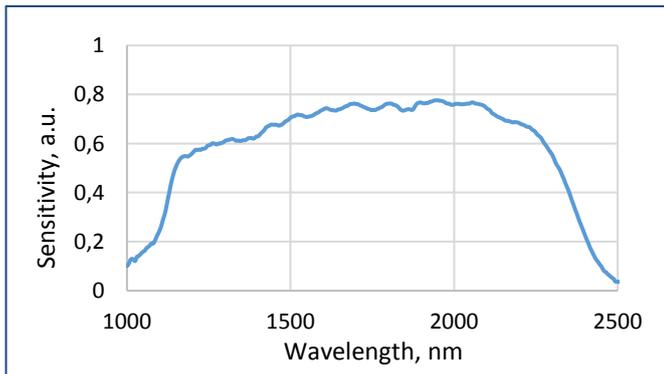


Temperature shift of spectral response

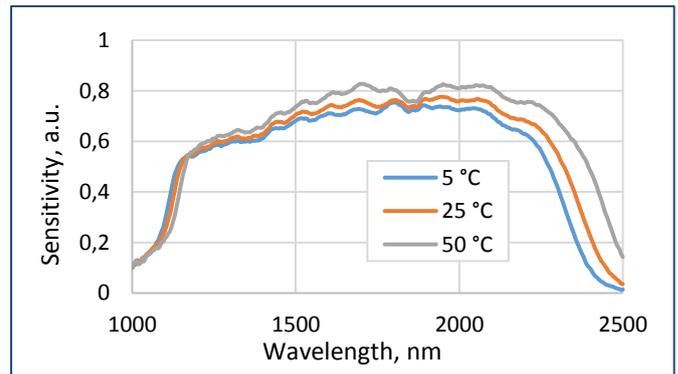

Typical current-voltage characteristic

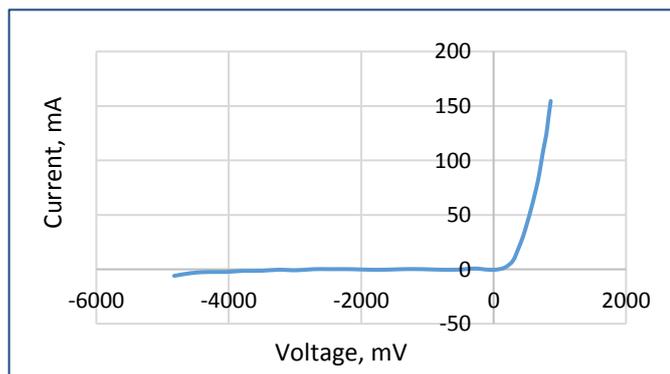

Capacitance vs. temperature

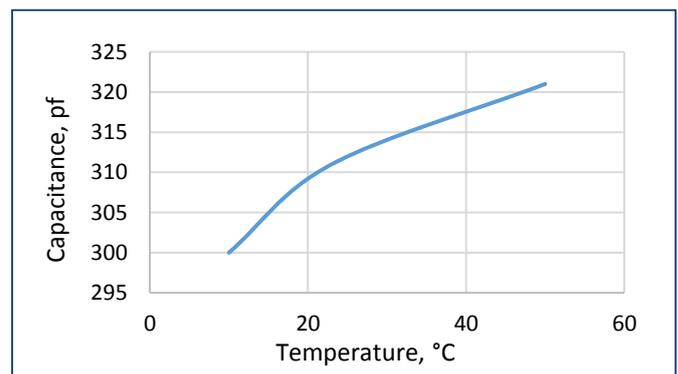


| Packages | Model |
|--|------------------|
| TO-18 with a cap without a glass window | Lms24PD-05 |
| TO-18 with a parabolic reflector without a glass window | Lms24PD-05-R |
| TO-18 with a parabolic reflector with a glass window | Lms24PD-05-RW |
| TO-5 with a built-in thermocooler and thermoresistor, covered by a cap with a glass window | Lms24PD-05-TEM |
| TO-5 with a built-in thermocooler and thermoresistor, covered by a parabolic reflector with a glass window | Lms24PD-05-TEM-R |
| PD with a built-in preamplifier; TO-18 with a parabolic reflector without a window in an aluminum tube | Lms24PD-05-R-PA |
| PD with a built-in preamplifier; TO-18 with a parabolic reflector with a window in an aluminum tube | Lms24PD-05-RW-PA |

Operation mode of photodiode with a built-in preamplifier

Photodiode models with LMSNT preamplifier (-PA) work in photovoltaic mode. Current generated by photodiode is amplified and converted by preamplifier into voltage signal. There is straight correspondence between PD current and resulting output voltage. The signal converted by preamplifier will have the same form, frequency and pulse duration as the photocurrent signal from photodiode. Current into voltage conversion coefficient is constant and depends on given photodiode.

NOTE! Preamplifier is typically tuned for operation with an LED emitter working in a pulse mode with 0.5 kHz frequency and 20 μs pulse duration. Tuning for other operation modes is available under special request.

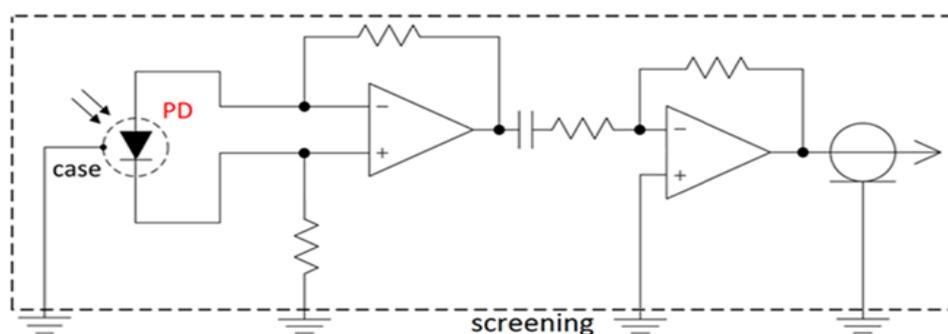

Power input voltage: +5 V, stabilized;

Connections:

The output of PD with a built-in preamplifier has four wires:

- "+" power input (to the "+" of the power output terminal block of the SDM synchronous detector);
- "-" power input (to the "-" of the power output terminal block of the SDM synchronous detector);
- output photodiode signal (to the "-" of the signal input terminal block of the SDM synchronous detector);
- output photodiode signal (to the "+" of the signal input terminal block of the SDM synchronous detector).


For the proper connection mind colours of the wires pointed in the technical data provided with the photodiode.

IMPORTANT CAUTIONS:


- please check your connection circuit before turning on the PD;
- please do not connect the PD to the multimeter.

Technical Drawings

Lms24PD-05-R-PA

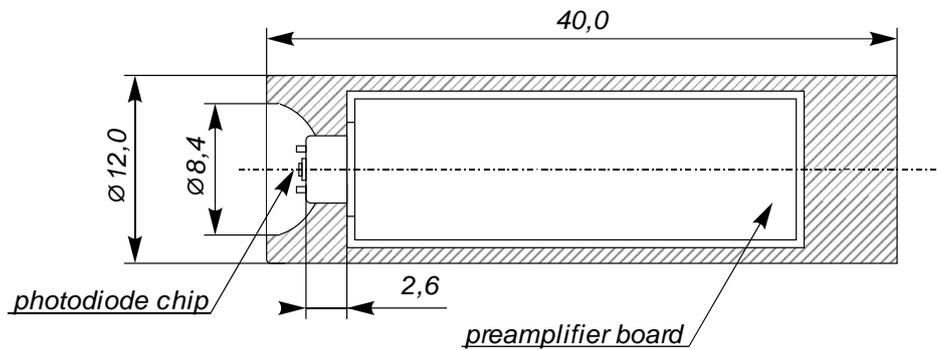

Lms24PD-05-RW-PA

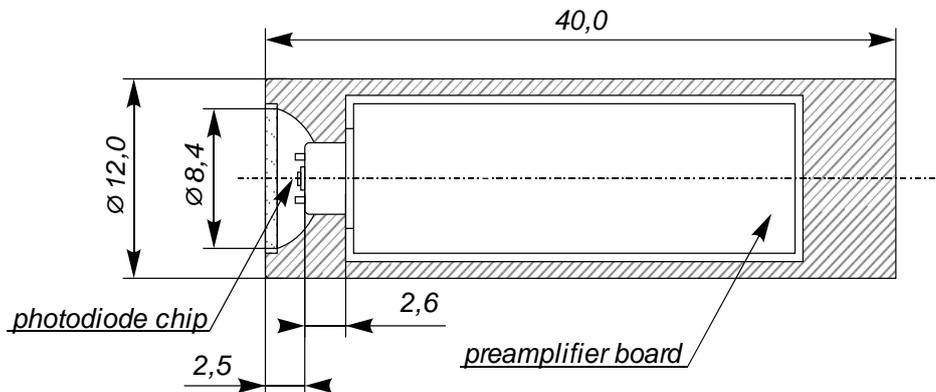

Related products:

- **LEDs** - sources of mid-infrared radiation;
- **SDM** - synchronous detector for PD models with preamplifiers - Lms MIR PD-XX-R-PA and Lms MIR PD-XX-RW-PA. SDM synchronous detector measures the voltage signal from the output of photodiode preamplifier and converts it to the DC voltage signal proportional to amplitude of voltage from input.